Franklin® DISCOVER

DRP-3000

AnyBook Reader

User's Guide

www.franklin.com

License Agreement

READ THIS LICENSE AGREEMENT BEFORE USING THE PRODUCT. YOUR USE OF THE PRODUCT DEEMS THAT YOU ACCEPT THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PURCHASE RECEIPT TO THE DEALER FROM WHICH YOU PURCHASED THE PRODUCT AND YOUR PURCHASE PRICE WILL BE REFUNDED. PRODUCT means the software product and documentation found in this package and FRANKLIN means Franklin Electronic Publishers, Inc.

Limited Use License

All rights in the PRODUCT remain the property of FRANKLIN. Through your purchase, FRANKLIN grants you a personal and nonexclusive license to use this PRODUCT. You may not make any copies of the PRODUCT or of the data stored therein at the time of purchase, whether in electronic or print format. Such copying would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, decompile, translate, create derivative works of, or in any way reverse engineer the PRODUCT. You may not export or reexport, directly or indirectly, the PRODUCT without compliance with appropriate governmental regulations. The PRODUCT contains Franklin's confidential and proprietary information which you agree to take adequate steps to protect from unauthorized disclosure or use. This license is effective until terminated by Franklin. This license terminates immediately without notice from FRANKLIN if you fail to comply with any provision of this license.

Please read the following safety warnings and precautions before using your device. **Note:** If this device is to be used by young children, this User's Guide should be read to them by an adult and their use of the device should be monitored. Failure to do so may cause injury.

Introduction

Thank you for purchasing *AnyBook Reader* – an electronic recording and playback device with optical reader. With this device, you can record readings and associate them with the provided stickers. To play back the recordings, simply touch the stickers with the optical reader of the device.

Important Safety Information

This user's guide contains important information. PLEASE KEEP FOR FUTURE REFERENCE.

Not suitable for children under 36 months. Contains small parts.

WARNING

CHOKING HAZARD – Small parts

Not for children under 3 years

This product conforms to safety requirements of ASTM F963 and EN 71 and the Canadian Hazardous Products (Toys) Regulations. *Ce produit est conforme aux normes de sécurité ASTM F963, EN 71 et aux règlements canadiens sur les produits dangereux (jouets).*

This Class B digital apparatus complies with Canadian ICES-003. *Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.*

About the Stickers

The product includes special stickers with pre-recorded sounds and dozens of blank stickers for your recordings. When additional stickers are required, you can purchase them at **www.franklin.com/anybook**.

In general, the stickers can be easily removed from and re-adhered on most kinds of papers except when the paper is too thin, made of special materials or with special coatings. When in doubt, please try to adhere and remove a sticker to test its adhesiveness before using the stickers extensively on a publication.

Battery Precautions

Your device is powered by 2 AAA batteries (not included).

- Non-rechargeable batteries are not to be recharged. Never recharge batteries that come with the device.
- Rechargeable batteries are to be removed from the device before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickle-cadmium) batteries.
- The supply terminals are not to be short-circuited.
- Do not expose batteries to direct heat or try to take batteries apart. Follow the battery manufacturer's instructions for battery use.
- Always remove a weak or dead battery from the device.
- To avoid damage caused by leakage of the battery fluid, replace the battery or batteries once every two years regardless of how much the device has been used during that time.
- Should a battery leak, the device may become damaged. Clean the battery compartment immediately, avoiding contact with your skin.
- Batteries are small objects. Keep batteries out of reach of small children. If swallowed, consult a physician immediately.
- Batteries should be installed or replaced by an adult only.
- Children should not have access to the product when the battery cover is removed.

Replacing the Batteries

Your product is powered by 2 AAA batteries (not included). Replace the batteries when:

- the LED light flashes (short blinks followed by long pauses);
- playback can only be at minimum volume level, and;
- recording cannot be made.

To replace batteries:

1. **Use a screwdriver to unscrew the battery cover at the back of the device.**
2. **Lift the battery cover gently to remove it.**
3. **Remove the old batteries.**
4. **Install 2 new AAA batteries following the polarity indicated in the battery compartment.**

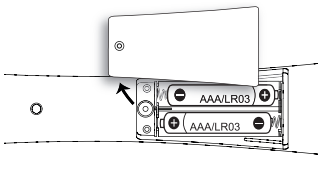

Important: Be sure the battery is installed correctly. Wrong polarity may damage the unit.

Note: For best performance, alkaline batteries are recommended.

5. **Replace the battery cover and secure it with the screw.**

Product Care

Your device is designed to be light, compact, and durable. However, it is an electronic device and must be treated carefully. Putting unnecessary pressure on it or striking the device against other objects can cause damage.

In order to avoid damage to your device, please:

- Do not drop, crush, bend, or apply excessive force to the device.
- Do not expose your device to moisture, extreme or prolonged heat, cold, humidity, or other adverse conditions. Avoid storing it in damp, humid, or wet places. The device is not waterproof.
- Clean the device by spraying a mild glass cleaner onto a cloth and wiping its surface. Do not spray liquids directly on your device.
- Please keep plastic bags away from babies and children to avoid danger of suffocation.
- Check the device from time to time for proper and safe condition. If there is any damage or broken parts, do not use the device.

Hearing Protection

Protect your child from long exposure of loud sounds at high volume. Set the volume to an appropriate level in different environments. Limit the listening time to 90 minutes. Stop using the device when the user experiences ringing in the ears or hears muffled speech. Do not hold or place the device near the ears.

Product Registration

Visit **www.franklin.com** for product registration.

Specifications

Model DRP-3000 *AnyBook Reader*
Batteries: 2 x AAA
Size: 6.5 x 1.6 x 1.1 in (165 x 41 x 28 mm)
Weight: 3.88 ounce (110 g)
ISBN: 978-1-59074-590-8

Franklin Electronic Publishers, Inc.
Burlington, N.J. 08016-4907 U.S.A.
Franklin Electronic Publishers, Ltd.
220 Bayview Drive, Units 3 & 4,
Barrie, Ontario L4N 4Y8, Canada.
All rights reserved. Patent Pending.
Imported to the European Community by: Franklin Electronic Publishers GmbH
Kapellenstr. 13, 85622 Feldkirchen, Germany

CE N681

Recycling and Disposal

✓ **Device Disposal**

This device should be disposed through your local electronic product recycling system - do not throw in the trash bin.

✓ **Packaging Disposal**

Please save this User's Guide and all packing materials, as they contain important information. In case of disposal, please refer to your local recycling system.

✓ **Battery Disposal**

Do not dispose of batteries with normal household waste. Please obey your local regulations when disposing of used batteries.

This unit may change operating modes, lose information stored in memory, or fail to respond due to electrostatic discharge or electrical fast transients. Normal operation of this unit may be re-established by pressing the reset key, by pressing ⏻ or by removing and replacing the battery.

FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

– Reorient or relocate the receiving antenna.

– Increase the separation between the equipment and receiver.

– Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

– Consult the dealer or an experienced radio/TV technician for help.

Note: This unit was tested with shielded cables on the peripheral devices. Shielded cables must be used with the unit to insure compliance.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Disclaimer of Warranties

Except as specifically provided herein, Franklin makes no warranty of any kind, express or implied, with respect to this product.

Limited Warranty (U.S. only)

LIMITED WARRANTY, DISCLAIMER OF WARRANTIES, AND LIMITED REMEDY

FRANKLIN WARRANTS TO THE ORIGINAL PURCHASER THAT THIS PRODUCT WILL BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP FOR A PERIOD OF ONE (1) YEAR FROM THE ORIGINAL DATE OF PURCHASE AS EVIDENCED BY A COPY OF THE SALES RECEIPT. THIS LIMITED WARRANTY DOES NOT COVER DAMAGE DUE TO ACTS OF GOD, ACCIDENT, MISUSE, ABUSE, NEGLIGENCE, MODIFICATION, UNSUITABLE ENVIRONMENT, OR IMPROPER MAINTENANCE. THE SOLE OBLIGATION AND LIABILITY OF FRANKLIN, AND THE EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY, IS REPAIR OR REPLACEMENT AT THE SOLE OPTION OF FRANKLIN AND THIS REMEDY APPLIES ONLY IN THE CASE IN WHICH FRANKLIN DETERMINES THAT THE PRODUCT WAS DEFECTIVE AND THAT THE DEFECT AROSE WITHIN THE DURATION OF THE LIMITED WARRANTY. THIS REMEDY IS THE EXCLUSIVE REMEDY FOR BREACH OF THIS WARRANTY. THIS WARRANTY GIVES YOU CERTAIN RIGHTS; YOU MAY ALSO HAVE OTHER RIGHTS THAT MAY VARY FROM JURISDICTION TO JURISDICTION.

EXCEPT FOR THE LIMITED WARRANTY EXPRESSLY RECITED ABOVE, THIS FRANKLIN PRODUCT IS PROVIDED ON AN "AS IS" BASIS, WITHOUT ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABLE QUALITY, MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE, OR THOSE ARISING BY LAW, STATUTE, USAGE OF TRADE, OR COURSE OF DEALING. THIS WARRANTY APPLIES ONLY TO PRODUCTS MANUFACTURED BY OR FOR FRANKLIN AND SPECIFICALLY DOES NOT INCLUDE BATTERIES, CORROSION OF BATTERY CONTACTS OR ANY OTHER DAMAGE CAUSED BY BATTERIES. FRANKLIN SHALL NOT HAVE ANY LIABILITY TO THE PURCHASER OR ANY OTHER PERSON OR ENTITY FOR ANY INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, BUT NOT LIMITED TO, LOSS OF REVENUE OR PROFIT, LOST OR CORRUPTED DATA, OR OTHER COMMERCIAL OR ECONOMIC LOSS, EVEN IF FRANKLIN HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR EVEN IF OTHERWISE FORESEEABLE. FRANKLIN IS NOT RESPONSIBLE FOR CLAIMS BY A THIRD PARTY. FRANKLIN'S MAXIMUM AGGREGATE LIABILITY SHALL NOT EXCEED THE AMOUNT PAID FOR THE PRODUCT AS EVIDENCED BY THE SALES RECEIPT. SOME STATES/JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IF THE LAWS OF THE RELEVANT JURISDICTION DO NOT PERMIT FULL WAIVER OF IMPLIED WARRANTIES, THEN THE DURATION OF IMPLIED WARRANTIES AND CONDITIONS ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY GRANTED HEREIN.

Warranty Service: If you think your product is defective, call Franklin's Customer Service Desk, 1-800-266-5626, to request a return merchandise authorization ("RMA") number, before returning the product (transportation charges prepaid) to:

Franklin Electronic Publishers, Inc.
Attn: Service Department
One Franklin Plaza
Burlington, NJ 08016-4907

If you return a Franklin product, please include your name, address, telephone number, a brief description of the defect and a copy of your sales receipt as proof of your original date of purchase. You must also write the RMA prominently on the package if you return the product; otherwise there may be a lengthy delay in the processing of your return. Franklin strongly recommends using a trackable form of deliver to Franklin for your return.

Limited Warranty (EU and Switzerland)

Notwithstanding the disclaimer of warranties above, this product, excluding batteries and liquid crystal display (LCD), is guaranteed by Franklin to be free of defects in materials or workmanship for a period of two years from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect in workmanship or materials during that time. This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This warranty does not affect the consumer's statutory rights.

Limited Warranty (outside U.S., EU and Switzerland)

Notwithstanding the disclaimer of warranties above, this product, excluding batteries and liquid crystal display (LCD), is guaranteed by Franklin to be free of defects in materials or workmanship for a period of one year from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect in workmanship or materials during that time.

Products purchased outside the United States, the European Union and Switzerland that are returned under warranty should be returned to the original vendor with proof of purchase and description of fault. Charges will be made for all repairs unless valid proof of purchase is provided.

This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This warranty does not affect the consumer's statutory rights.

ABP-28000-00
Rev F

1 General Controls

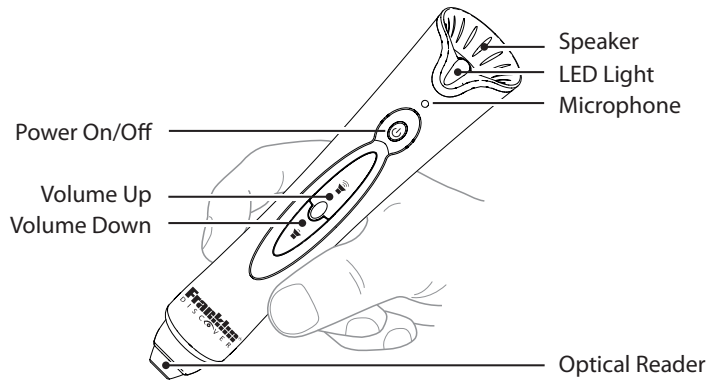

2 Stickers

This product includes two types of stickers.

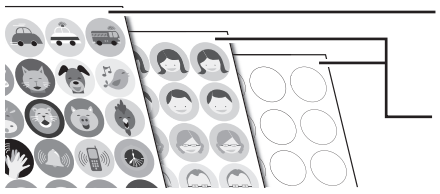

Special stickers with pre-recorded sounds which cannot be replaced or deleted.

Stickers for your own recordings which can be replaced or deleted anytime as you want.

Tips on reading this user's guide: This product uses sound prompts to assist operations. For your familiarization of these sounds, touch the ear icons with your reader while reading the instructions to hear sound prompt samples. We recommend you read and "hear" through this user's guide before making any recordings.

3 On/Off

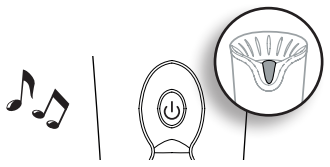

Press ⏻. A sound prompt can be heard before on or off. LED light stays lit when the device is turned on.

sound prompt samples

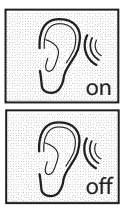

4 Recording

① 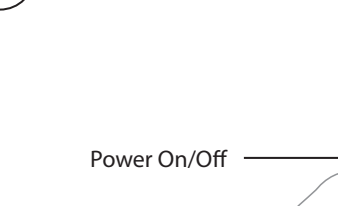

Press and hold ⏻ for 3 seconds to hear a sound prompt and go to the recording mode. LED light flashes.

sound prompt sample



②

Touch a sticker.

③

Press and hold for recording. As countdown, four beep sounds can be heard before recording starts. LED light flashes quicker during recording.

sound prompt sample

Note: *For a sticker already with recording, the current recording will be replaced with the new one. The pre-recorded sounds of the provided special stickers cannot be replaced. An error sound prompt can be heard instead. To hear a sample of the sound prompt, see Step 3 under Deleting Recording.*

④ 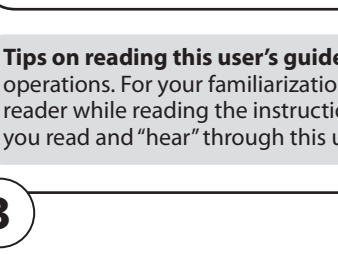

Release to stop recording. A beep sound can be heard when recording stops. LED light stays flashing.

sound prompt sample

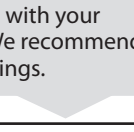

Note: *To ensure that your complete recording is stored, please release the button one second after you finish your recording.*

⑤ 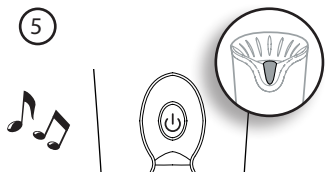

Press and hold ⏻ for 3 seconds to hear a sound prompt and exit the recording mode. LED light stays lit.

sound prompt sample

5 Playback

Touch a sticker. For a sticker without recording, a sound prompt can be heard instead.

sound prompt sample

IMPORTANT

DO NOT write on the stickers. Otherwise, recordings may not play back.

6 Deleting Recording

The reader allows around 15 hours of recording. New recordings cannot be made when the memory of the device is full (You hear a beep sound immediately after the four-beep countdown). Please delete unwanted recordings.

① 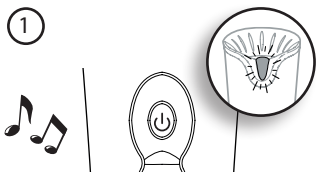

Press and hold ⏻ for 3 seconds to hear a sound prompt and go to the recording mode. LED light flashes. *To hear a sample of the sound prompt, see Step 1 under Recording.*

②

Touch a sticker with recording.

③ 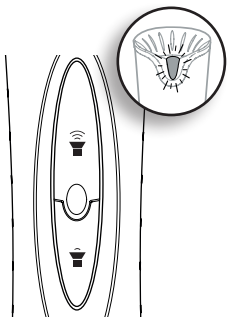

Press and hold and . Deletion starts when LED light flashes quicker.

Note: *The pre-recorded sounds of the provided special stickers cannot be replaced. An error sound prompt can be heard instead.*

sound prompt sample

④ 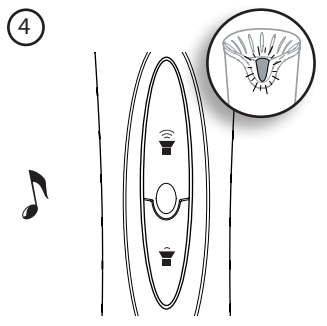

A beep sound can be heard when deletion is completed. Release and . LED light stays flashing.

sound prompt sample

⑤ 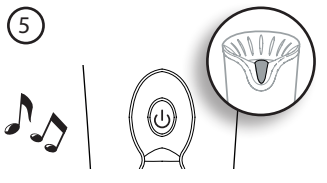

Press and hold ⏻ for 3 seconds to hear a sound prompt and exit the recording mode. LED light stays lit. *To hear a sample of the sound prompt, see Step 5 under Recording.*

7 Auto Power Off

When the device is inactive:

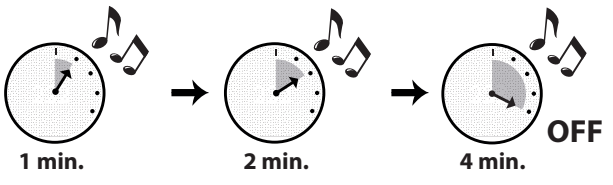

= Sound prompt. *To hear samples of the sound prompts, touch the clocks above with your reader.*